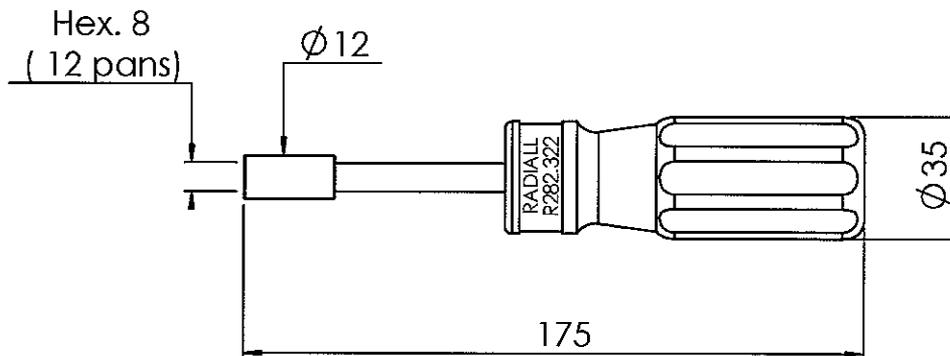


TORQUE WRENCH**R282.322.000****8MM - 280 NCM**Series : **OUT**

INSTRUCTION FOR USING

1. Insert the connector into the tool.
2. Screw the connector into the panel by tool rotation until the torque click.
3. Pull the tool. The connector remains on the panel.

Issue : 0521 A

In the effort to improve our product, we reserve the right to make changes judged to be necessary.

**RADIALL®**