



Crimp 11 : Cable feedthrough

COMPONENTS

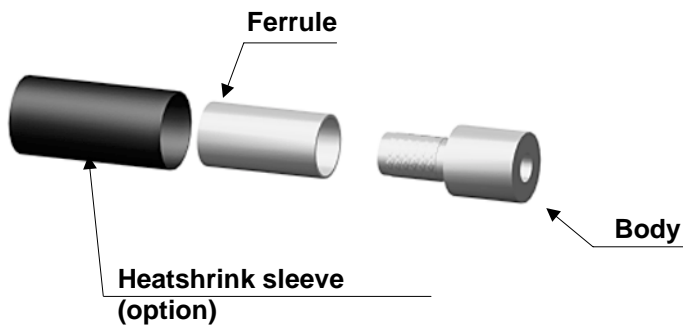


STRIPPING DIMENSIONS

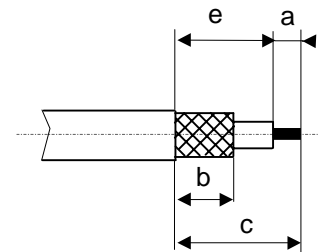


1

Slide the heatshrink sleeve onto the cable (Option).
Slide the ferrule onto the cable.
Strip the cable.

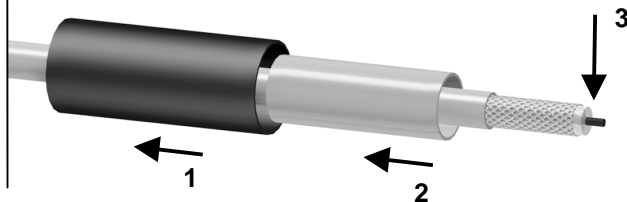


4

Slide the ferrule over the braid.

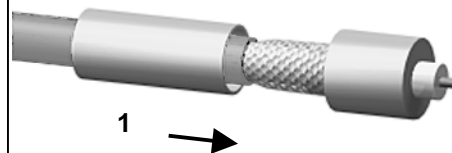


2

Fan the braid.
Solder the centre contact.
Clean solder area.

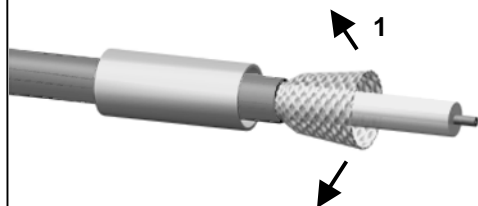


5

Crimp the ferrule with crimping tool (see connector TDS).

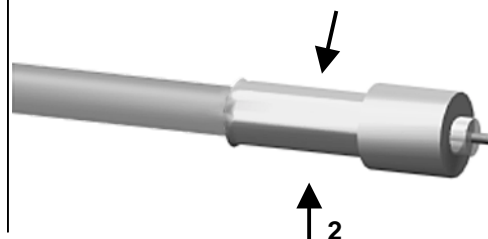

3

Slide the cable into the body.

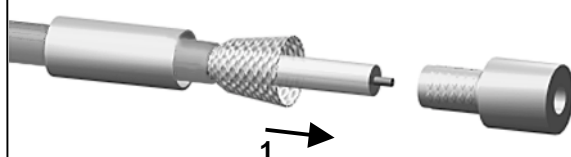

6

Cut the excess of braid if necessary.
Slide the sleeve over the ferrule and heatshrink it in place (Option).

