




APPLIED ENGINEERING PRODUCTS


(203) 776-2813 FAX (203) 776-8294

www.aepconnectors.com


Assembly Instructions

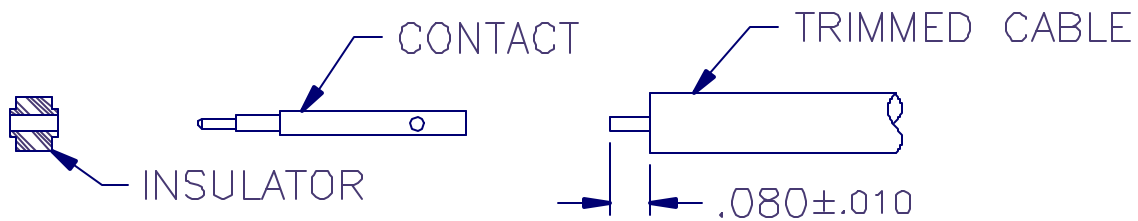

1. TRIM CABLE AS SHOWN.

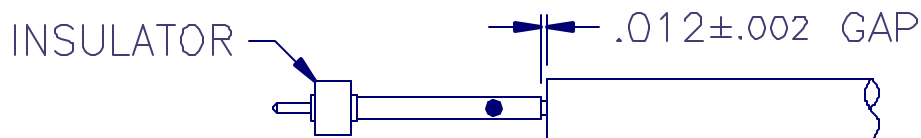

2. SOLDER CONTACT TO CENTER CONDUCTOR, LEAVING A GAP BETWEEN REAR OF CONTACT AND CABLE JACKET AS SHOWN.
3. INSTALL INSULATOR OVER CONTACT.

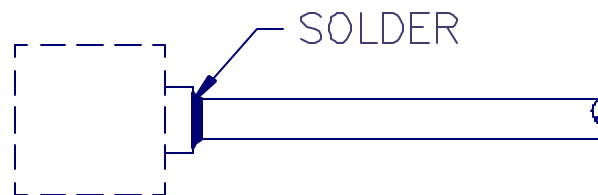

4. INSERT CABLE INTO BODY UNTIL IT BOTTOMS. CHECK THAT INSULATOR AND CONTACT MEET INTERFACE DIMENSIONS.
5. SOLDER CABLE JACKET TO CONNECTOR BODY. DO NOT DISTURB JOINT UNTIL IT HAS COOLED. CLEAN FLUX RESIDUE.

AIS-355-B REV. —